### **D11708 Smart Commercial Installation Manual**



### ConverLight® Dynamic Smart Commercial Installation manual

This manual is intended to describe the installation and commissioning of ChromoGenic's control system ConverLight Dynamic Smart Commercial.

Document ID: D11708 / 7

2024-12-13

### **Contents**

Inform	ation on the Smart Commercial system	2
Schem	atic system control	2
Conver	rLight Dynamic Smart Commercial - System components	3
Safety	directions	3
Techni	ical Specifications	4
Criteria	a and limitations	5
Operat	tion of system	5
Installa	ation requirements	5
Genera	al project demands	6
Installa	ation and commissioning	7
Overvi	ew	7
Compo	onent labeling	7
CCU Q	Quattro	8
1.	Placement	8
2.	Installation	8
3.	Perform and document the electrical function test	9
Gatewa	ay	10
Light s	ensors	11
Electric	cal function test of the system (commissioning test)	12
Attach	ment A - Self-inspection protocol	13
Attach	ment B – System commissioning letter	14



### Information on the Smart Commercial system


ChromoGenics' system ConverLight Dynamic Smart Commercial is based on a series of control units called CCU, ConverLight Control Unit. All ConverLight Dynamic windows in a property are connected to a CCU. In the Smart Commercial system, all CCU's are in communication with a Gateway through LoRa- radio communication.

The Gateway specifies to the CCU when to color or bleach the windows. When these commands are given depends on information that the Gateway receives from Light sensors which are wirelessly placed on the roof or facade.

The system has a Main Gateway. All Gateways in the property must be connected to the same network as the main. The Main Gateway also communicates with an external service cloud.

Gateways and CCUs are powered by 12-24V connectors (minimum 12W), and light sensors are powered by battery.

### Schematic system control

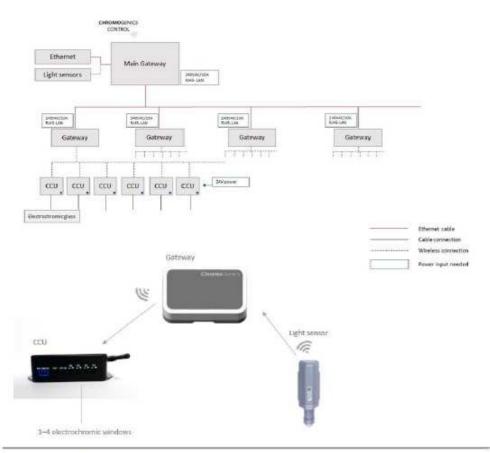



### ConverLight Dynamic Smart Commercial - System components

Name	Specifications
CCU Quattro	Can be connected to up to 4 windows – (1-4 windows) Connection: 12-24VDC (minimum 12W) connector (wall plug adapter can be supplied) Power output: ≤1.0VDC (to window) LoRa-radio communication with the Gateway.
Gateway	Connection: 12VDC/1.5A wall plug adapter (included). RJ45 LAN- contact (not included). LoRa-radio communication with CCU.
Light sensor	Wireless light sensor. LoRa-radio communication with Gateway.  One sensor placed in every direction/zone.  Powered by battery.

### Safety directions

The control system and its components, excluding the light sensor, are for indoor use only. Never connect anything other than specified connectors or cables to the inputs.



### **Technical Specifications**

CCU Quattro						
	Mechanics / End	losure				
Туре	Width x Height x Depth (mm)	Rating	Remarks			
Box	122 x 100 x 35	-	Wall/ceiling mount			
Antenna	11 x 19 x 98	-	Mounted on the CCU			
Input Power						
Vo	tage	Nominal Power				
12-2	4VDC	Sin	gle mA			
Communication						
Type	Connection type	Remarks				
LoRa-radio	**					

	Light senso	ıΓ				
Type	Power		Communication	Rating		
Light sensor (lux)	Battery D size 3.6V Li-SOCl2 Expected lifetime: ~5 years	5	Wireless (LoRa-radio)	IP66		
	Communication					
Type	Connection type		Remarks			
LoRa-radio	Wireless	Communication with the Gateway				ateway

Gateway						
		Mec	hanics / E	nclosure		
Туре		dth x Height x Depth (mm)	Rating	Remarks		
Box	2	22 x 137 x 54	IP30	Can be placed on cable ladders above the ceiling or in technical room		
Antenna		11 x 19 x 98 - Mounted on the Gateway				
Input Power						
AC Adapter power Gate			teway powered with			
100-240V/0.	100-240V/0.5A			12-24 VDC / 1.5A		
		Inpu	ut Commu	unication		
Type		Contact		Remarks		
Ethernet RJ45			Needs an internet connection to connect to ChromoGenics Cloud			
	Output Communication					
Type		Contact	act Remarks			
LoRa-radi	0	Wireless		Communication with CCU and light sensor		



### Criteria and limitations

	Smart Commercial
Max number of Gateways connected to Main- gateway	No limit
Max number of CCU connected to one Gateway	No limit in number. The limit is based on the structure of the building.
Max distance (m) from CCU to closest Gateway	50/100m depending on walls and possible signal disruptions etc.
Max number of CCU per property	No limit
Max number of CCU in a zone	No Limit
Max number of windows connected to each CCU	4

### Operation of system

Generally, the system is controlled by set values of measured light intensity. Light values indicate when to color or bleach zones. A property can be divided into several zones.

To receive full function of the system. The Gateway needs to be connected to a network that is either open or is given access to ChromoGenics cloud-website.

### Installation requirements

- To ensure safe operation and communication, wires recommended by ChromoGenics should be used.
- In case of splicing, Solder Splice Connectors of suitable dimensions should be used. If cables have been spliced, the cable should be ensured both mechanically and electrically.



### General project demands

To implement ChromoGenic's control system Smart Commercial with the quality and possibilities that the system offers, there are some demands and conditions that need to be clarified.

Such conditions include:

- Room structure
- Number of zones
- Distances
- · Number of windows
- Possible cable wiring
- · Possible placements of components

Upon ordering we go through the possibilities and requirements for each project and dimension the system according to the customers' wishes.



### Installation and commissioning

### Overview

### Preparation:

- Dimensioning the system together with ChromoGenics sketch proposal provided by ChromoGenics and installation drawings with all components marked to be completed by ChromoGenics' customer.
- All windows installed, IDs marked on façade drawings and yellow cable ID tags accessible (visible when connecting the glass to a CCU).

### Steps of installation:

- Place the CCUs according to the drawings, connect the windows, perform the electrical function test and document it in the self-inspection protocol (see Attachment A).
- Place the Gateway(s) according to the drawing, connect power and network cable.
- Place light sensors: Mount the light sensors on the roof or façade, facing the specified direction.
- Book commissioning of the system and send the self-inspection protocols and other required documents to ChromoGenics.
- Perform the electrical function test of the system (commissioning test) in cooperation with ChromoGenics. A protocol will be provided by ChromoGenics, see Attachment B.
- Any deviations detected during commissioning must be rectified by the installer and if not possible to do so within the commissioning test time slot, a new test must be booked.

It is the responsibility of the installer to perform and document the electrical function tests as detailed in these instructions. This is mandatory for the warranty to apply.

The following sections provide more detailed instructions on installing and testing of the components and system.

### Component labeling

All components are labeled when delivered from ChromoGenics. The labeling complies with the system below.

Device	Labeling	Example
CCU Quattro	CCU4-Serial number	CCU4-001
Gateway	GW-Serial Number	GW-001
Light sensor	LS-Serial Number	LS-001

### **CCU Quattro**

### 1. Placement

Each CCU has a label CCU4-xxx as described in the previous section. Each unit has a predetermined position in the building according to drawings. It is important that the right unit is placed in the right position.

### 2. Installation


All connections are made with the included 2- and 3-pin contacts.

- A 3-pin contact is used for DC-power.
  - Using provided wall plug adapter: Connect the 3-pin connector to the CCU and the wall plug to a power outlet.
  - Cable connection: Mount the cables to the 3-pin connector, plus to DC and minus to GND, see picture below.
- 2-pin contacts are used to connect windows to the CCU.

### Red cable = + Black cable = -

Ensure that the polarity is correct when connecting the windows! If the polarity is switched, it may cause irreversible damage to the window.

The connections of the CCU Quattro are shown below:



Explanation:

PV: Solar cell (+)

GND: Minus connection for solar panel and DC-power. (-)

DC: DC-power (+)

TEST: Test button

OFF-ON: Power switch for

CCU Quattro

G1-G4: Glass 1 - Glass 4



Once the windows and the power source are connected, turn the unit ON using the switch.

The system is configured before installation so the unit will automatically join the network.



- 3. Perform and document the electrical function test
  - Make sure the CCU is ON and then press the TEST button.
  - Document the result for each CCU.
  - An example of the protocol can be found at the end of this document, see Attachment A.
     The protocol must contain the following information: CCU ID, window ID, signature of correct placement and successful tests.



Note! The test will only check if there is any contact with the window. If the polarity of the cables is switched, the test will still show a green signal if the cables and connections are intact. It is therefore very important to know that the polarity is correct.

Pressing the button will yield 4 LED-signals next to the button:

Signal 1	Glass 1	Green: Contact with glass OK	Red: No contact with glass / Glass not connected
Signal 2	Glass 2	Green: Contact with glass OK	Red: No contact with glass / Glass not connected
Signal 3	Glass 3	Green: Contact with glass OK	Red: No contact with glass / Glass not connected
Signal 4	Glass 4	Green: Contact with glass OK	Red: No contact with glass / Glass not connected

If 4 windows are connected, 4 green LED-signals are required to know that all connections are correct. If a window signal is red when there is a window connected, the connection/cables need troubleshooting.

Document each test in the self-inspection sheet, see Attachment A.



### Gateway

All Gateways delivered by ChromoGenics have a serial number and a pre-determined position according to technical drawings.

At the position of each Gateway, there must be access to a power outlet of 100-240VAC and a RJ45 LAN-connection. Connect the provided wall plug adapter and connect the Gateway to the network and it will start automatically.

All Gateways must be connected to the same Ethernet network through RJ45-LAN connections.



### Light sensors

Depending on the number of light zones that will be used, the same number of light sensors should be placed somewhere suitable.

It is the white bulb that registers the lux value. This means that it is this part that should be placed in the same direction as the windows. Sensors should therefore be placed horizontally if the dynamic glass is placed in a façade. An example of how this was done is shown in the image below, where the sensors were mounted on the roof, all in one place but facing different directions.

Think about accessibility. The sensors should be relatively easy to reach in case of troubleshooting or future battery replacements.

Light sensors are wireless. Once the sensor is placed in the right position, press the button on the sensor once. The button will light up green, start pulsating and will finish with a series of fast blinking signals. The sensor will have joined the LoRa network automatically. If the sensor is not blinking fast the LoRa network has not been found, if so then check that all Gateways are connected properly.





Example of sensor placement



### Electrical function test of the system (commissioning test)

When the windows have been installed and the control system connected (including performing the electrical function test for the CCUs) it is time to book the commissioning test. It is the responsibility of the installer to book the test.

The installer must be on site to assist and possibly rectify any deviations identified during the commissioning test. ChromoGenics will connect to the system remotely and perform the tests.

It is the responsibility of the installer to ensure this test is completed successfully. A commissioning protocol will be provided by ChromoGenics upon completion, see Attachment B.

### Attachment A - Self-inspection protocol

For warranty to apply, the following needs to be returned to ChromoGenics:

- Complete self-inspection sheet.

- Revised drawings marked with all ChromoGenics units.

# Self-inspection / Function test

## **Chromo**Genics

Project: Performed by: CCU ID		Glass 2		Control system: Date: Correct	Control system: Smart Commercial  Date:  Correct Tested – All Sign
	L-number	L-number		placement	==



### Attachment B - System commissioning letter

This protocol documents the results of the electrical function system test (commissioning test). A successfully completed test is a requirement for the warranty to apply.

Project name:					
Project contact per	son:				
ChromoGenics pro	ject number				
Date commissionin	ng test:				
Zone / Facade	Connection	<u> </u>			Comment
	Gateways	CCUs	Light sensors	Window	
South					
East					
West					
I hereby confirm th the system as spec			e been performe	ed successfu	ully for the entire / parts of
Person at Chromo	Genics perfo	orming the t	est		
Name and position					
Signature:					
Date:					